
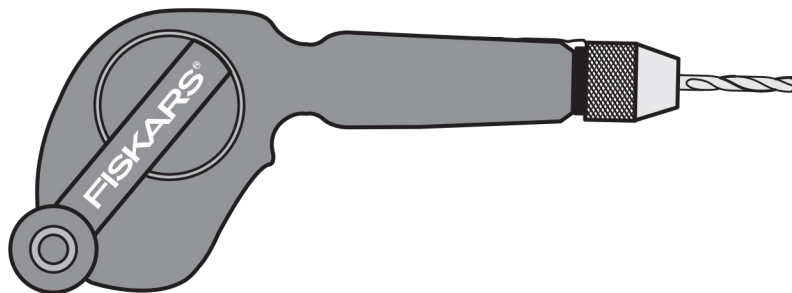


Instructions: Craft Drill

FISKARS®

Instructions:

Hold drill as shown between index and middle fingers.

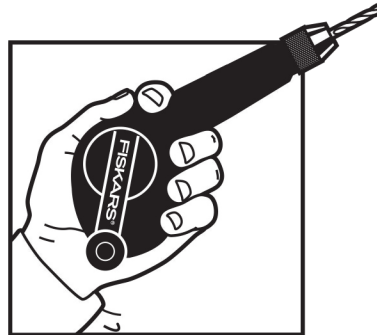

To insert drill bit:

1. Hold crank in place.
2. Twist drill chuck counter-clockwise to open.
3. Insert bit.
4. Twist drill chuck clockwise to tighten and secure bit.