



This prick device enables you to pre-prick the magazines or sections in the back before you bind them together.

The holes in the triangled batten are drilled at 16 mm and fit a 2 mm awl.

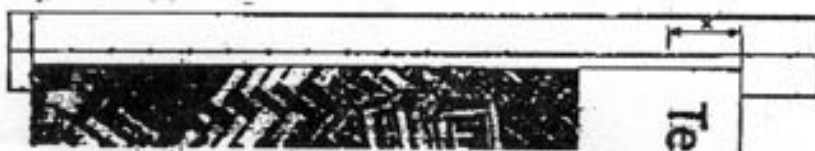

The working method.

Determine where you want to have the holes in the back of the magazine by laying the back along the holes and starting at the line. When you want the top and bottom hole symmetric, you measure the distance of the second last hole to the edge of the magazine and divide the measure in 2.

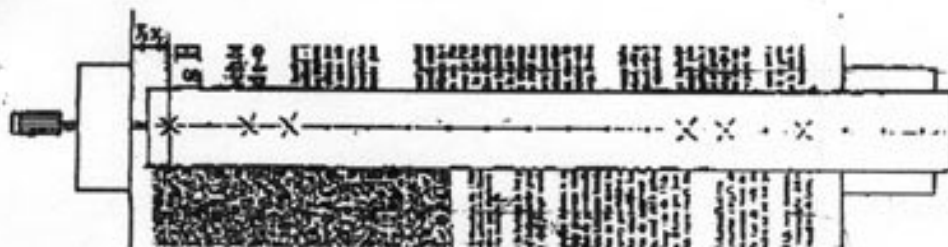

Open the magazine in the middle where it is stapled and lay it in the V-groove against the stop. Adjust the knurled bolt till the first hole is at  $1/2 x$  distance. Now the bottom and top hole are at same distance. You can mark the other holes in the back with a removable pencil line or cross. When the pricking can't be done in one time, you can do it in a second turn after adjusting the knurled bolt.

The pricking is always accurate and it goes straight through the back of the magazines. This is a great advantage for neat binding work.

The staples of the magazines can be removed after the binding of the block is done.